

MONSTER® **ADVENTURER MAX**



Quick Start Guide

 
Please read this Quick Start Guide carefully
and keep it for future use.

Model No.: MT-MS22101




Product Overview

- Speaker Unit
- USB-C Charging Cable
- AUX IN Audio Cable
- Baldric
- Quick Start Guide, General Safety Warnings & Warranty Card

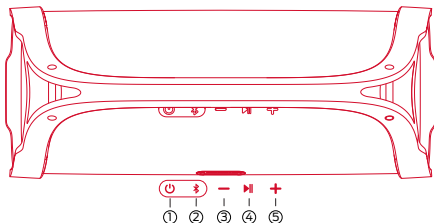

 1. Power On/Off Button, Mode Button, audio input selection
Charging LED Indicator
2. Bluetooth Pairing, disconnect/connect, Mode LED Indicator
3. Volume Control “-” Button, volume down, track backward
4. Multi Function Button (MFB), music play/pause...
Indoor/outdoor audio switching
5. Volume Control “+” Button, volume up, track forward

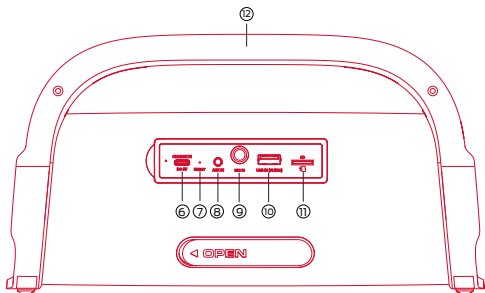

- 6. USB-C Charging Input
- 7. Reset Button
- 8. AUX IN Port
- 9. MIC IN Port (6.35mm)
- 10.USB IN (Audio) Port
- 11. SD Slot
- 12.Handle

Power/Charging

For better enjoyment, you should fully charge the speaker before use.

The package includes a USB-C charging cable (charge only, no data transfer function) that can be connected to your computer or other device made for standard USB compatible charging. Charging with 5V/2A or above power adapter (not included).

Caution: ONLY use computer USB output or standard 5 volt only power adapter for charging.

Damage may occur if non-standard USB power adapter is used for charging. Do not charge if connector and/or device is wet or damaged.

Power On/Off

In power off mode, press and hold the Power On/Off Button for about 2 seconds to power on the speaker, you hear the opening tone.

To power off the speaker, press and hold the Power On/Off Button for about 2 seconds again, you will hear a shutdown tone.

Caution: If no Bluetooth device is connected, the speaker will be turned off within about 15 minutes.

Pairing

- When you unbox the speaker and power it on for the first time, it will enter to pairing mode automatically.
- If Bluetooth device is connected, press and hold the Bluetooth button for about 3 seconds, disconnect and ready to pair another device.
- If speaker does not connect any Bluetooth device, it will enter to pairing mode automatically.

During pairing, activate Bluetooth on your phone and set it to search for new Monster device for pairing. When the speaker is connected successfully, connected tone will be heard and the blue LED will stop flashing and the LED indicator will remain on.

Volume Control

Short press the Volume Button “+” or “-” to turn volume up or down.

Music

Play/Pause: In the music playback mode, press the MFB to play/pause music.

Track forward: In the music playback mode, press and hold the Volume “+” Button for 2 seconds for next song.

Track backward: In the music playback mode, press and hold the Volume “-” Button for 2 seconds for previous song.

SD Card Playback

When speaker is on and SD card is inserted, SD card is the priority playback source. If you want to use Bluetooth function, press the “①” Button to switch the source.

AUX IN Playback

When speaker is on and audio source is inserted via AUX IN, AUX IN is the priority playback source. If you want to use Bluetooth function, press the “①” Button to switch the source.

USB IN (Audio) Playback

 
When speaker is on and USB drive is inserted, USB IN (Audio) is the priority playback source. If you want to use Bluetooth function, press the “①” Button to switch the source.

Playback Priority

The Bluetooth mode is the default playback mode, when there are multiple audio sources, the playback priority is as follows:

- SD Mode – first priority
- AUX IN Mode – second priority
- USB IN (AUDIO) Mode – third priority
- Bluetooth Mode – fourth priority

Audio source can be switched by press the “①” Button, the sequence is as follows:



Microphone (Dynamic -60dB±3dB)

When speaker is on, microphone is ready to use after plugging the jack into the MIC IN Port and switch on.

Power Saving Setting

- In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.
- SD card mode/AUX IN mode/ USB IN (AUDIO) mode or Bluetooth mode, no music playback for 15 minutes, the speaker will be switched off automatically.
- If microphone is plugged in and idled over 15 minutes, the speaker will be switched off automatically.

Indoor/outdoor audio mode switching

When the speaker is on, press and hold the multi-function button for 3 seconds to switch the indoor/outdoor sound mode.

Reset Device

If there is a malfunction, press the Reset Button by using a paper clip.

LED Indicator Guide

Status	Description	Voice/Tone
Power On	LED Indicator: white LED stays On	Opening Tone
Power Off	LED Indicator: White LED lights off	"Goodbye"
Pairing	Mode LED Indicator: blue LED flashes quickly	"Discovering"
Bluetooth Connected	Mode LED Indicator: blue LED stays On	"Your device is connected"
SD Mode	Mode LED Indicator: red LED stays On	-
USB IN Mode	Mode LED Indicator: pink LED stays On	-
AUX IN Mode	Mode LED Indicator: green LED stays On	-
Battery low	-	"Battery low"
Charging	Charging LED Indicator: red LED lights when charging, turns off after fully charged	-

Special Note:

- ⑫ indicates the handle of the Bluetooth speaker, maximum weight cannot exceed 25kg to avoid any accidents.

Battery Use Caution:

- It is not recommended to replace the battery privately.
- The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

Specifications

Input	5V, 2A
Ingress Protection	IPX7
Battery	11.1V, 4000mAh
Speaker (Main base) Output	2 x 30W
Speaker (Treble) Output	2 x 15W
Bluetooth	5.0
Bluetooth Operation Range	10m
USB/Micro SD Format	Up to 64GB
Dimensions	399mm x 214mm x 160mm (W x H x D)
Net Weight	3.47kg

For Technical and Warranty Support:

1300 886 649

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,
PO Box 132, Frenchs Forest NSW 1640

Compliance and Responsible Disposal

Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.



Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.

Notes

Notes



1300 886 649

tempo.org/support

Distributed by Tempo (Aust) Pty Ltd,
PO Box 132, Frenchs Forest NSW 1640