



PARTY SPEAKER F10

MODEL: MT-F10

User Manual



Welcome

Premium connectivity that fuels modern lifestyle and empowers innovation.

A better everyday experience through amazing products.

The user manual will provide everything you need to know about using your new product.

All our products are produced and tested to stringent standards of performance and safety, and are pleased to provide a 2 Year Warranty with your purchase.

We hope you enjoy your purchase.



Contents

Welcome	2
Product Overview	4
Controls and Connections	5
Operation	10
Troubleshooting	12
Specifications	14
Compliance and Responsible Disposal	15

Product Overview

What's in the box:

 
- A. Party Speaker
- B. Power Cord
- C. AUX Cable
- D. Remote Control
- E. Wireless Microphone
- F. FM Antenna
- G. User Manual
- H. Warranty Card
- I. General Safety Warning

2 x AAA Batteries (for Remote Control) and 2 x AA Batteries (For Wireless Microphone) **are not included.**




Controls and Connections

Top View

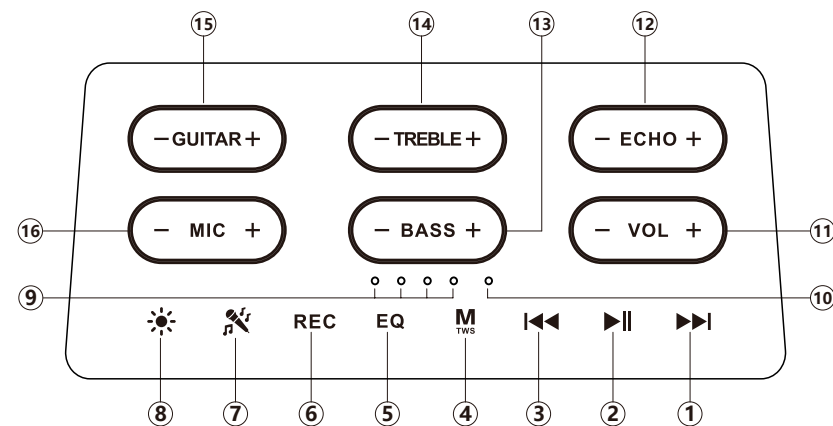


Back View

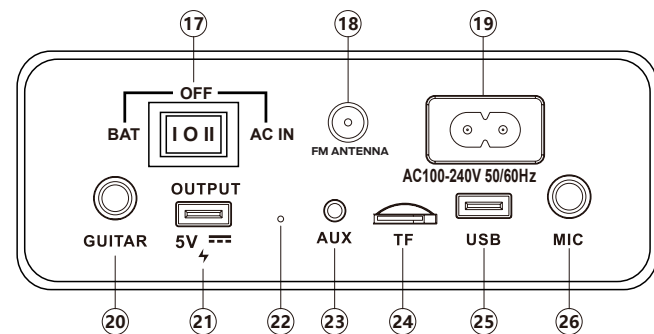 

1.  : Short press switch to next songs when playing music. long press to fast forward.
2.  : Short press to play/pause.
3.  : Short press switch to previous songs when playing music. long press to rewind.
4.  : Short press mode conversion: Bluetooth, FM, AUX , U disk, TF card. Long press for TWS function.
5.  : Short press to switch two different sound effects.
6. **REC** : Please insert a U disk or TF card when in the recording function and Bluetooth internal recording, then insert a wired microphone or turn on the wireless microphone, and then short press the record button to record. When playing a recording file, long press the record button to delete the recording. When playing music, long press the record button to quickly enter the recording file.
7.  : Short press to remove the original sound.
8.  : Short press to turn on the light, long press to turn off the light.
9. **White light** : Battery indicator.
10. **Blue light** : Function indicator.
11. – **VOL +** : Adjust the main volume of the speaker unit.
12. – **ECHO +** : Adjust the echo of the microphone.
13. – **BASS +** : Adjust the volume of the bass sound.
14. – **TREBLE +** : Adjust the volume of the Treble sound.
15. – **GUITAR+** : Adjust the volume of Guitar.
16. – **MIC +** : Adjust the volume of the microphone.
17. **Power supply** : The first gear is powered by an internal battery, and the second gear is powered by AC power charging.

18. **FM antenna jack** : Insert an external antenna to enhance the FM signal.
19. **AC power supply jack** : Insert the AC power cable for charging.
20. **GUITAR** : Insert an instruments to play.
21. **OUTPUT** : Connect USB cable as a mobile power bank, output 5V-MAX 1.5A.
22. **Charging indicator** : The red light is on when charging, the red light is off when fully charged and the green light is on.
23. **AUX** : AUX audio input.
24. **TF** : Insert TF card to play MP3 music.(Max workable capacity for TF Card is 64 GB ,if more than 64 GB it can not work)
25. **USB** : Insert U disk to play MP3 music.(Max workable capacity for USB is 64 GB ,if more than 64 GB it can not work)
26. **MIC** : Insert wired microphone to singing.

 Remote Control

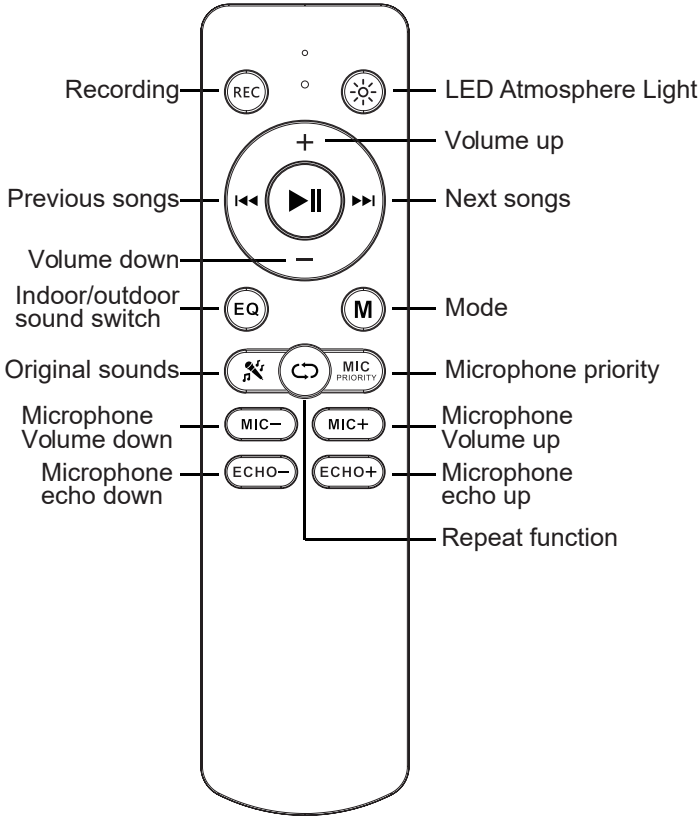

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remote, please aim it at the receiving window of the device. There should be no obstacles between the remoter and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remote may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote battery has ran out, you can replace the AAA battery to avoid mixing old and new batteries. Please check the batteries regularly to see if they need to be replaced.

Wireless Microphone Control



1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left. and replace the AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. In case of Howling, do not put the microphone close to the speaker device. Try to put the microphone a little bit away from or the back of the speaker device, or try to turn down the volume of microphone.
5. Low microphone volume/No microphone volume: Please make sure the microphone volume is turn up to the maximum.

Operation

Bluetooth® Mode

- Turn on to enter the Bluetooth mode.
- Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing.
- If there is a prompt to pair the password, please enter “0000” and click confirm connection.

Bluetooth® Recording Mode

- Insert TF card or U disk (should have at least one mp3 file in storage), then switch to Bluetooth mode. The mobile phone plays the accompaniment music after connecting to the bluetooth.
- Insert in a wired microphone or turn on a wireless microphone.
- Short press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start to play the internal recording file.

Charging Mode

- Please use the AC power cable provided with this device for charging;
- The red light is on when charging, the red light is off when fully charged and the green light is on.

FM Mode

- Press **M_{TWS}** button to switch to FM function.
- Long press pause button to automatically search the station and the found station is automatically saved, after search, press the previous song or the next song to select the station.
- Short press pause to stop playing FM.

Operation

 
TWS connection Mode

- When using the TWS function, place the two speakers horizontally in the same direction.
- In bluetooth mode, turn on the two bluetooth speaker device at the same time, and then turn on any speaker and short press TWS key to pair with another speaker to connect, long press **M_{TWS}** to disconnect TWS.

The optimal connection distance between two Bluetooth speakers is about 5 meters.

Demo Mode

- Turn on the speaker, keep pressing EQ button to play the demo.
- Short press EQ to stop demo.

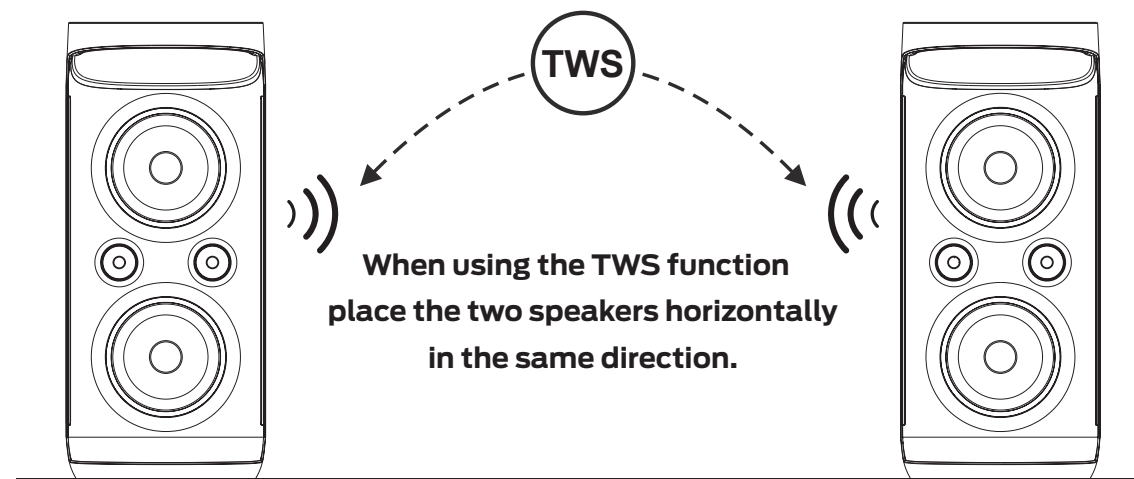

Troubleshooting

If you encounter any problems with your product, please check this list of possible issues for a solution. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
No audio from right speaker	• Ensure that the speaker cable is connected to the left and right speakers
No sound in USB mode	• Adjust the volume knob. • Check that the USB cable is securely connected to the USB INPUT port. • Adjust the volume of your PC/laptop. • Check that your PC/laptop is on the correct speaker output.
No sound in Bluetooth mode	• Check that you are connected to the Bluetooth device. The LED status indicator should light up blue (flashing indicates it is in pairing mode). • Adjust the volume knob. • Adjust the volume of your Bluetooth device.
Automatically shut down when turned on	• The battery is low, please fully charge it before use. When charging, the switch must be in the AC IN switch, otherwise it will keep restarting. • The battery can also be charged when it is turned off or in AC IN switch
The player automatically shuts down or restarts	• The battery is low, please fully charge the speaker before use.

Problem	Solution
The charging light is not on, not charging	• Check whether the AC power cord is plugged in well or the AC power cord is damaged. • Please use AC100-240V 50/60Hz power supply to charge the speaker
TF card/U disk playback is silent	• Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The music in the TF card/U disk mainly supports MP3 compressed audio files and WMA lossless audio files playback); • Check if the device volume is adjusted to the minimum.
Recording doesn't work	• Check if there are any storage space in the TF card or U disk, If none, delete some unwanted files to regain storage space. • Recording should be in TF card mode, U disk mode and insert a wired microphone or turn on a wireless microphone.
The recording won't delete	• Please long press the record button or connect to a computer to delete it when playing the recording file.
The recording sound is low or there is noise	• Insert a wired microphone or turn on a wireless microphone when recording.

Specifications

Input	100-240V AC 50/60Hz, 70W Max
Battery	Li-ion 7.4V 6000mAh, 44.4Wh
Output	60W (RMS)
Speaker	Woofer 6.5", 30W x 2 Tweeter 2", 10W x 2
Frequency Range	80Hz-18KHz
S/N	≥80dB
Dimensions	278 x 324 x 640mm

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

For Technical and Warranty Support

1300 886 649
monster@tempo.org
monsterproducts.com.au
Distributed by Tempo (Aust) Pty Ltd,
PO Box 6097,North Sydney NSW 2059

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.

Battery

When removing the batteries from the remote control and microphone, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

WARNING: Batteries must not be exposed to excessive heat such as sunshine, fire or sources of heating.

