



PARTY SPEAKER F5

MODEL: MT-F5

User Manual



Welcome

Premium connectivity that fuels modern lifestyle and empowers innovation.

A better everyday experience through amazing products.

The user manual will provide everything you need to know about using your new product.

All our products are produced and tested to stringent standards of performance and safety, and are pleased to provide a 2 Year Warranty with your purchase.

We hope you enjoy your purchase.



 
Contents

Welcome	2
Product Overview	4
Controls and Connections	5
Operation	10
Troubleshooting	12
Specifications	14
Compliance and Responsible Disposal	15

Product Overview


What's in the box:

- A. Party Speaker
 - B. USB-C Charging Cable
 - C. AUX Cable
 - D. Remote Control
 - E. User Manual
 - F. Warranty Card
 - G. General Safety Warning
- 2 x AAA Batteries (for Remote Control) **are not included.**

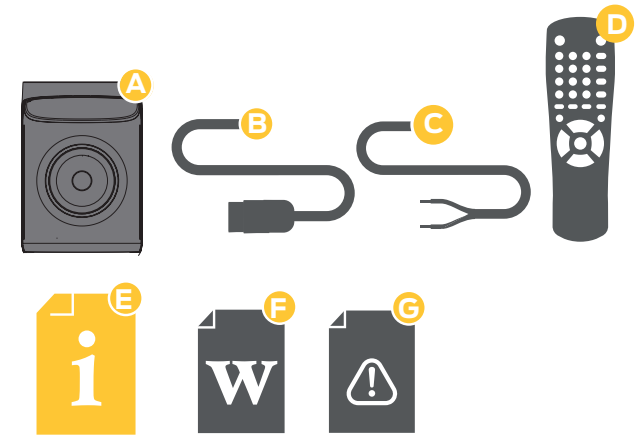


Controls and Connections

 Top View

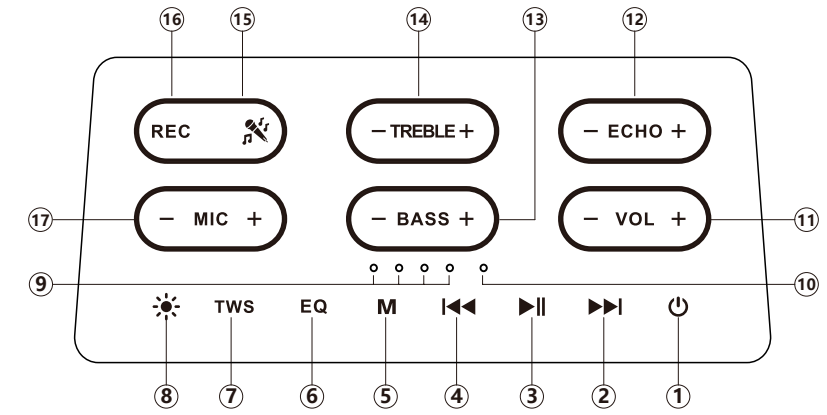


Back View

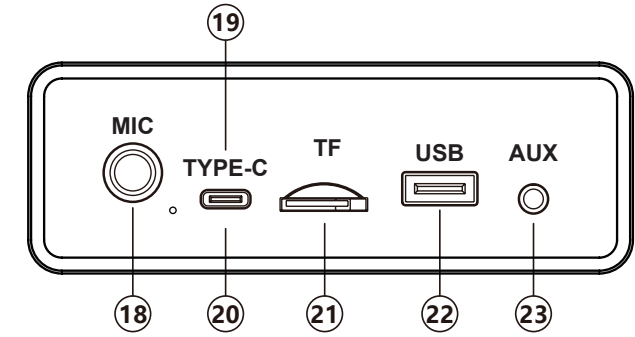 

1.  : Long press to power on/off. (Press and hold for 10 seconds to reset)
2.  : Short press switch to next songs when playing music. long press to fast forward.
3.  : Short press to play/pause
4.  : Short press switch to previous songs when playing music. long press to rewind.
5.  : Short press mode conversion: Bluetooth, FM, AUX , U disk, TF card.
6.  : Short press to switch two different sound effects.
7. **TWS** : Short press to enter into TWS function, long press or disconnect TWS.
8.  : Short press to turn on the light, long press to turn off the light.
9. **White light** : Battery indicator.
10. **Blue light** : Function indicator.
11. **- VOL +** : Adjust the main volume of the speaker unit.
12. **- ECHO +** : Adjust the echo of the microphone
13. **- BASS +** : Adjust the volume of the bass sound.
14. **- TREBLE +** : Adjust the volume of the Treble sound.
15.  : Short press to remove the original sound.
16. **REC** : Please insert a U disk or TF card when in the recording function and Bluetooth internal recording, then insert a wired microphone, and then short press the record button to record. When playing a recording file, long press the record button to delete the recording. When playing music, long press the record button to quickly enter the recording file.
17. **- MIC +** : Adjust the volume of the microphone.

18. **MIC** : Insert wired microphone to singing.
19. **TYPE-C** : Charging jack, you can use the special TYPE-C charging cable distributed by the unit, connect to the QC3.0 adapter for charging.
20. **Charging indicator** : The red light is on when charging, the red light is off when fully charged.
21. **TF** : Insert TF card to play MP3 music.(Max workable capacity for TF Card is 64 GB ,if more than 64 GB it can not work)
22. **USB** : Insert U disk to play MP3 music.(Max workable capacity for USB is 64 GB , if more than 64 GB it can not work)
23. **AUX** : AUX audio input

 Remote Control

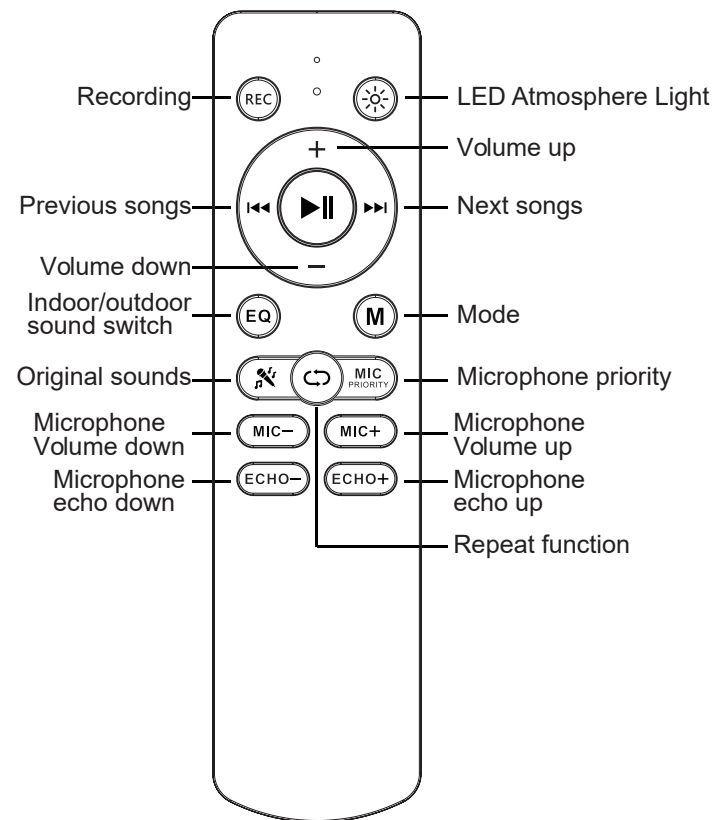

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remote, please aim it at the receiving window of the device. There should be no obstacles between the remoter and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remote may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote battery has ran out, you can replace the AAA battery to avoid mixing old and new batteries. Please check the batteries regularly to see if they need to be replaced.

Operation

Bluetooth® Mode

- Turn on to enter the Bluetooth mode.
- Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing.
- If there is a prompt to pair the password, please enter “0000” and click confirm connection.

Bluetooth® Recording Mode

- Insert TF card or U disk (should have at least one mp3 file in storage), then switch to Bluetooth mode.
- The mobile phone plays the accompaniment music after connecting to the bluetooth.
- Insert in a wired microphone or turn on a wireless microphone.
- Short press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start to play the internal recording file.

Charging Mode

- To protect the performance of the battery, avoid using the machine while charging.
- Connect the charging cable to the QC3.0 adapter of 5V-3A/9V-3A and plug it into the charging port after the machine is turned off. the red light is on when charging, and the red light is off when fully charged.
- Note: The machine has no power bank function, it is forbidden to connect other devices through the USB interface.

Operation

FM Mode

- Press M button to switch to FM function.
- Long press pause button to automatically search the station and the found station is automatically saved, after search, press the previous song or the next song to select the station.
- Short press pause to stop playing FM.

TWS connection Mode

- When using the TWS function, place the two speakers horizontally in the same direction.
- In bluetooth mode, turn on the two bluetooth speaker device at the same time, and then turn on any speaker and short press TWS key to pair with another speaker to connect, long press to disconnect TWS.
- The optimal connection distance between two Bluetooth speakers is about 5 meters.

Demo Mode

- Turn on the speaker, keep pressing EQ button to play the demo.
- Short press EQ to stop demo

Troubleshooting

If you encounter any problems with your product, please check this list of possible issues for a solution. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
No sound in USB mode	• Adjust the volume knob. • Adjust the volume of your PC/laptop. • Check that your PC/laptop is on the correct speaker output.
No sound in Bluetooth mode	• Check that you are connected to the Bluetooth device. The LED status indicator should light up blue (flashing indicates it is in pairing mode). • Adjust the volume knob. • Adjust the volume of your Bluetooth device.
Automatically shut down when turned on	• The battery is low, please fully charge the device before use.
The player automatically shuts down or restarts	• The battery is low, please fully charge the speaker before use.
The charging light is not on, not charging	• Check Whether the charging cable is plugged in well or the charging cable is damaged.

Problem	Solution
TF card/U disk playback is silent	• Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The music in the TF card/U disk mainly supports MP3 compressed audio files); • Check if the device volume is adjusted to the minimum.
Recording doesn't work	• Check if there are any storage space in the TF card or U disk, If none, delete some unwanted files to regain storage space. • Recording should be in TF card mode, U disk mode

Specifications

Input	Type-C 5V==3A, 9V==3A
Battery	Li-ion 7.4V 6000mAh, 44.4Wh
Output:	40W (RMS)
Speaker	Woofer 6.5", 40W Tweeter 2", 10W
Frequency Range	80Hz-18KHz
S/N	≥80dB

For Technical and Warranty Support

1300 886 649
monster@tempo.org
monsterproducts.com.au
Distributed by Tempo (Aust) Pty Ltd,
PO Box 6097,North Sydney NSW 2059

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.

Battery

When removing the batteries from the remote control and microphone, make sure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery. Please dispose of batteries responsibly by recycling at your nearest recycling centre.

WARNING: Batteries must not be exposed to excessive heat such as sunshine, fire or sources of heating.



Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

 **MONSTER™**