

MONSTER®

STREET BOOMBOX SPEAKER



User Manual

MODEL: MT-BBS04



Welcome

Premium connectivity that fuels modern lifestyle and empowers innovation.

A better everyday experience through amazing products.

The user manual will provide everything you need to know about using your new product.

All our products are produced and tested to stringent standards of performance and safety, and are pleased to provide a 1 Year Warranty with your purchase.

We hope you enjoy your purchase.



Contents


Welcome	2
Product Overview	4
Controls and Connections	5
Operation	6
Troubleshooting	9
Specifications	10
Compliance and Responsible Disposal	11

Product Overview




What's in the box:


- A. Street Boombox Speaker
- B. Carry Strap
- C. USB-C Cable
- D. AUX Cable
- E. User Manual
- F. Warranty Certificate
- G. General Safety Warnings

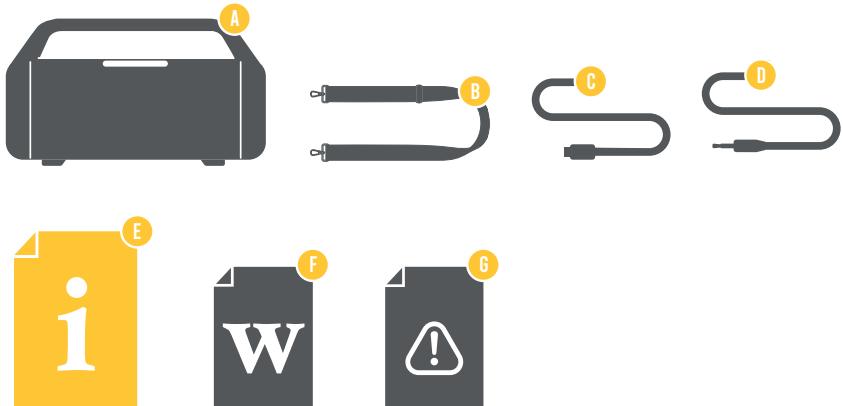

Controls and Connections

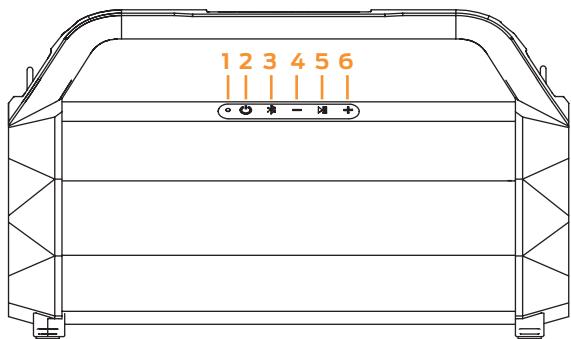

Front view

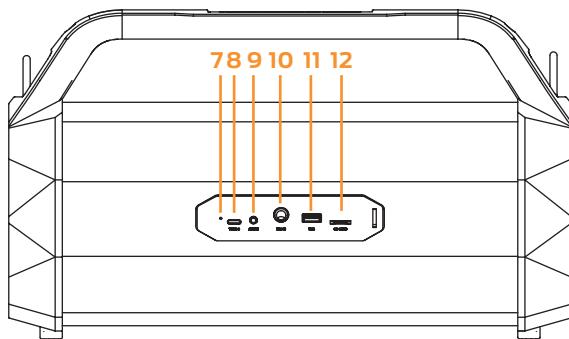

Rear view

1. LED indicator
2. ⚡ button
3. ✖ button
4. - button
5. ⏪ button
6. + button
7. Reset button
8. USB-C port
9. AUX port
10. Microphone port
11. USB port
12. MicroSD card slot

Operation

Powering the Boombox

- Connect the supplied USB-C cable to the USB-C port on the boombox and the other end to a power source.
- When charging, the LED indicator will flash green. When fully charged, the LED indicator will light up green.
- Press and hold the  button to turn the boombox on.
- Press the  button to change between input modes.
- Press and hold the  button to turn the boombox off.

Bluetooth® Mode

- Press the  button to enter Bluetooth mode. The LED indicator will flash blue.
- On your smart phone, select MT-BBS04 from the list of available devices.
- Once Bluetooth connection is successful, the LED indicator will stop flashing and light up solid blue.
- You can now use your smart phone to play audio through the speakers.
- Use the -/+ buttons to adjust volume level, or you can control volume directly from your smart phone.
- Press and hold the -/+ buttons to play the previous/next song, or you can control directly from your smart phone.
- Press the  button to play/pause song, or you can directly control from your smart phone.
- The default mode is outdoor mode, press and hold the  button to enter indoor mode (EQ mode).
- Press and hold the  and + buttons for 4-5 seconds, to be notified of the battery level.
Note: Make sure music is not playing to perform this function.
- Press and hold the  button to disconnect the connection.

TWS Mode

- Press the  button twice to enter TWS mode, where you can pair with another boombox (same model) and play audio from the two boomboxes simultaneously.
- Turn both boomboxes on and press the  button twice to enter TWS pairing mode. The LED indicator will flash blue slowly and once successfully connected, a voice prompt will be heard.
- Audio will now be played simultaneously through the two boomboxes.
- Press the  button twice to disconnect TWS mode.

AUX-IN Mode

- Connect the supplied AUX cable to the AUX port on the boombox and the other end to an external audio device.
- The boombox will automatically enter AUX mode.
- Use the -/+ buttons to adjust volume level, or you can control volume directly from your external audio device.
- In AUX-in Mode, use your external audio device to play the previous/next song
- Press the  button to play/pause song, or you can directly control from your external audio device.

MIC Mode

- Connect a 6.5mm wired microphone (not included) to the Microphone port on the boombox.
- You can now sing along to your favourite songs (supports Bluetooth/AUX/USB/MicroSD mode).

Charging times

- For best performance, It is recommended to use a USB-C PD charger of more than 30W. This will enable a fast charging time of between 2.5 to 3 hours.
- Lower power chargers will have an extended charging time. (e.g. A 10W charger will take 7.5 to 8 hours)
- The recommended temperature range for charging is between 25°C (77F) and 35°C (95F).
- The actual charging time may vary depending on remaining battery capacity, power source and environment variables.



USB Mode

- Insert a USB stick to the USB port on the boombox. The boombox will automatically enter USB input mode.
- Use the -/+ buttons to adjust volume level.
- Press and hold the -/+ buttons to play previous/next song.
- Press the **▶||** button to play/pause song.

MicroSD Mode

- Insert a MicroSD card to the MicroSD card slot on the boombox. The boombox will automatically enter MicroSD input mode.
- Use the -/+ buttons to adjust volume level.
- Press and hold the -/+ buttons to play previous/next song.
- Press the **▶||** button to play/pause song.

Troubleshooting

If you encounter any problems with your product, please check this list of possible issues for a solution. If you don't find a solution here, contact After Sales Support on 1300 886 649.

Problem	Solution
No audio from boombox	<ul style="list-style-type: none">Ensure that the boombox is turned on.Ensure there is sufficient battery.
No sound in Bluetooth mode	<ul style="list-style-type: none">Check that you are connected to the Bluetooth device.Adjust the volume of the boombox.Adjust the volume of your Bluetooth device.
No sound in AUX IN mode.	<ul style="list-style-type: none">Adjust the volume.Check that the AUX cable is securely connected to the AUX IN port.Adjust the volume of your external device.
No sound in USB mode	<ul style="list-style-type: none">Adjust the volume.Check that the USB is securely connected to the USB port.
No sound in MicroSD mode	<ul style="list-style-type: none">Adjust the volume.Check that the MicroSD card is securely connected to the MicroSD port.



Specifications

Battery	Li-ion 11.1V == 4000 mAh
Power output	2 x 30W
IP rating	IP66
USB Input	5V/9V/12V/15V/20V == Max:30W
USB-C output:	5V/9V/12V == Max:30W
Dimensions	394 x 166 x 231mm
Net weight	3.6 kg

 The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Hands (IP) Holdings Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

For Technical and Warranty Support

1300 886 649

monster@tempo.org

monsterproducts.com.au

Distributed by Tempo (Aust) Pty Ltd,
PO BOX 6097, North Sydney, NSW, 2059.

Compliance and Responsible Disposal



Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.



MONSTER®

Always Lead. Never Follow.™



Please read the manual

It will help you get the
best out of your product.



Still have questions?

Call After Sales Support

1300 886 649

Or visit tempo.org/support



Please scan the QR code to
access the latest manual